 


Please read these instructions thoroughly before installation.

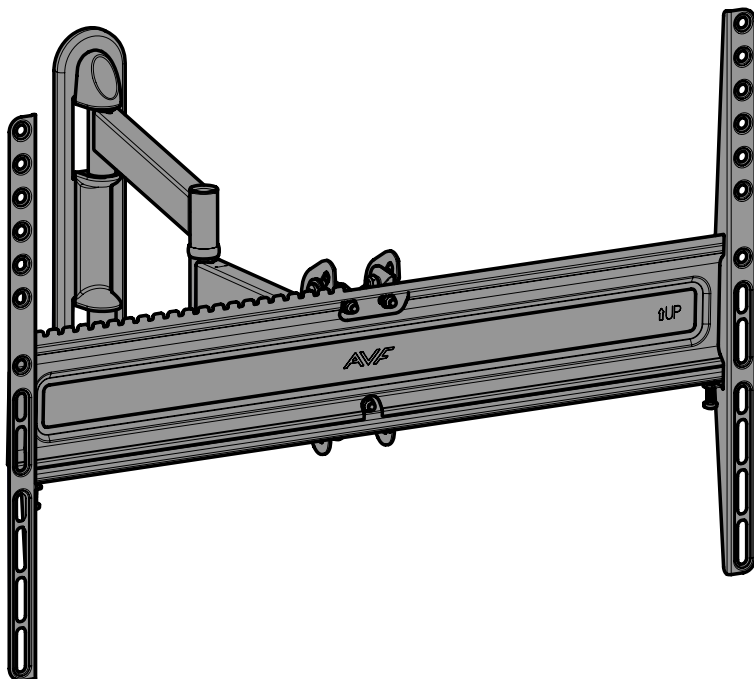

60kg
132lb

Please don't return me to the store

If you are unsure or need advice
please contact our **UK-based support team:**



0333 320 0463 | avfgroup.com

Phone lines open Mon-Fri during AVF office hours

Retain all packaging in case the bracket needs to be returned.

Contents may vary from photography/illustrations.

You will not need all these parts, so expect there to be some left over depending upon the specification of your TV.

This product is intended for indoor use only. Use of this product outdoors could lead to failure and personal injury.

It is the responsibility of the installer to ensure that the mounting wall is of a suitable standard and void of any services (eg gas, electricity, water etc).

AVF accept no responsibility for any damage or loss caused by installing this product in a sub standard wall.



10 YEAR WARRANTY

 
 
 
 


This product comes with a 10 Year Warranty.

This will be honoured as long as the product is owned by the original consumer purchaser. Proof of purchase is required.

For detailed warranty information please visit: www.avfgroup.com/uk/warranties

You will need

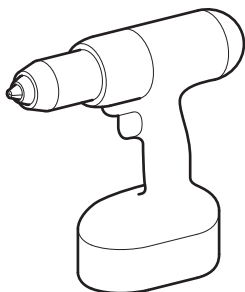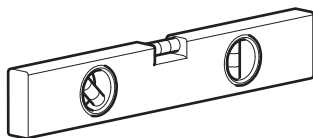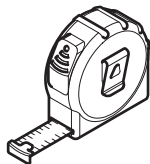


Ø3mm (1/8") Wood





Ø10mm (25/64") Masonry

 Parts Included




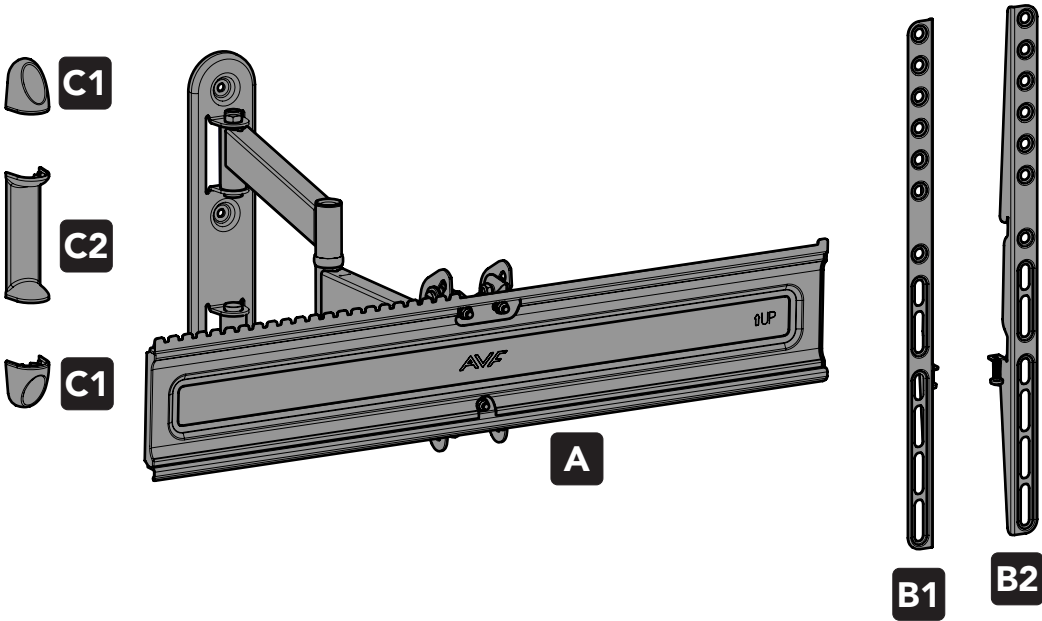


Fixings Included:

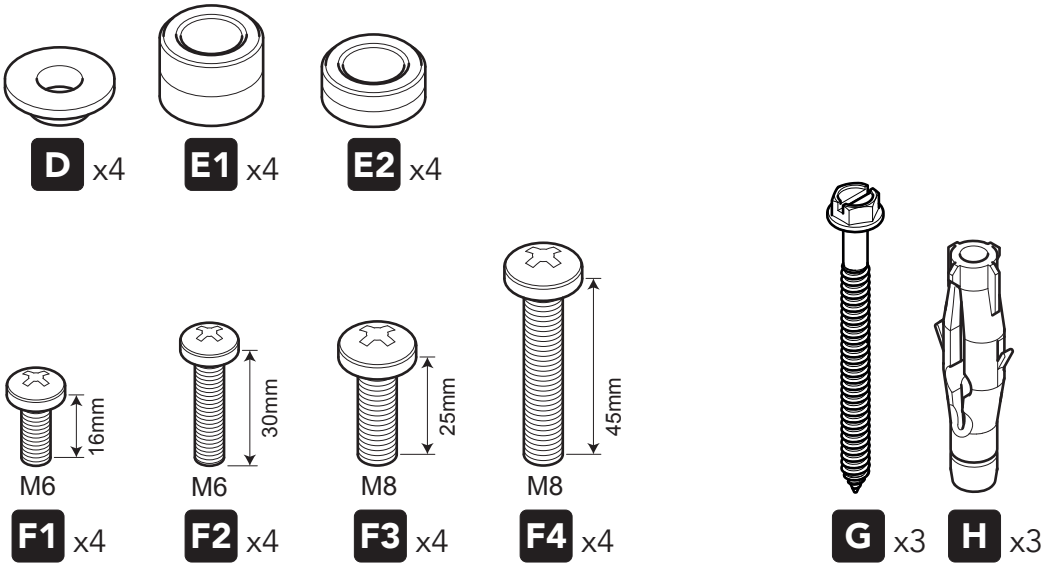 


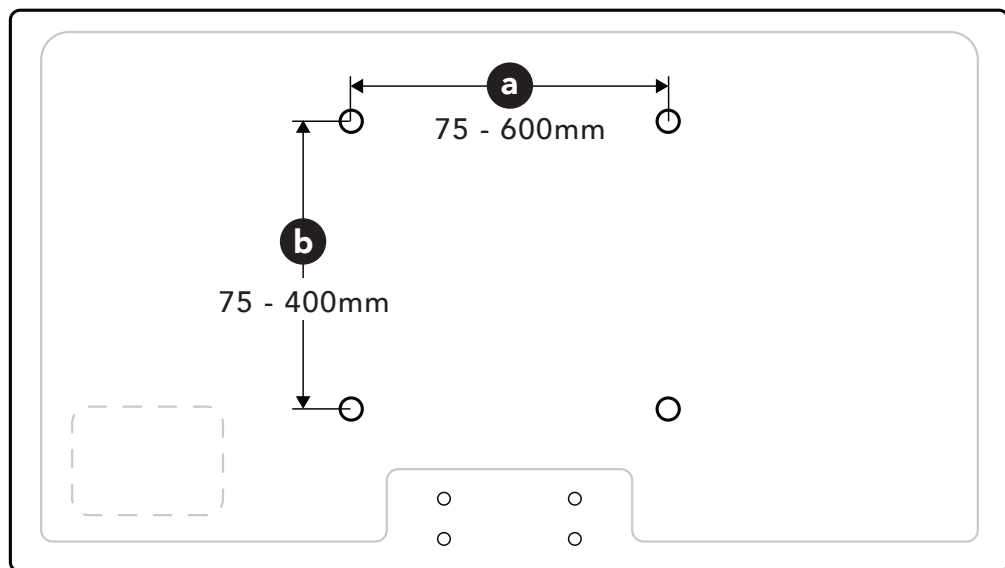 1**Measure your VESA fixings and select TV Screws**

    
600 x 400mm (MAX).

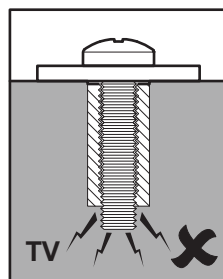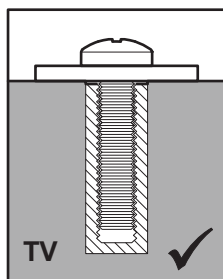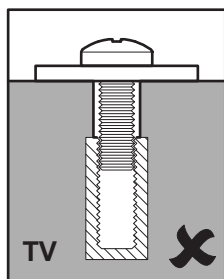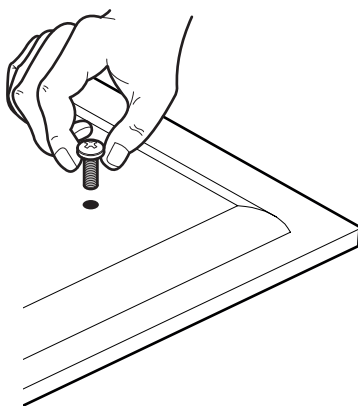

2 Fitting the TV Brackets

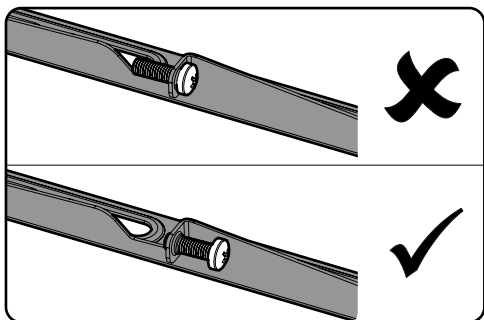 


 
Use the screw that fits the holes on the back of your TV.

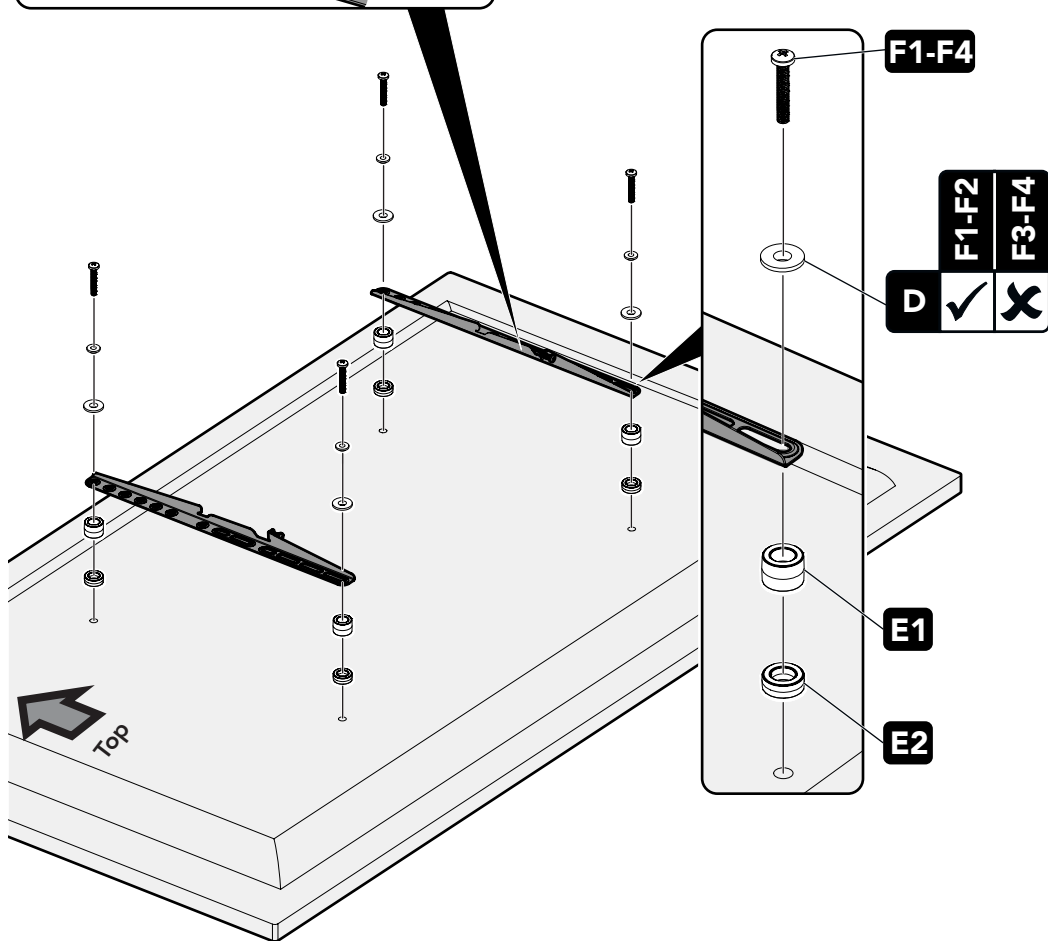



You only need to use spacers **E1** or **E2** if the screws are too long or the back of your TV is not flat.

3a

  
Solid Wall

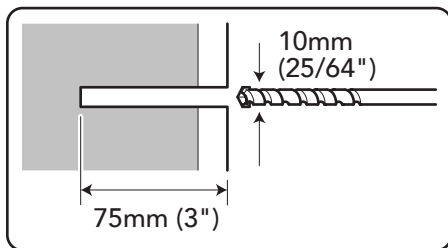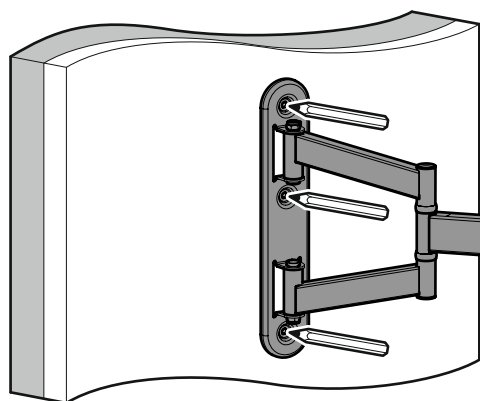

Remove Dust from Hole

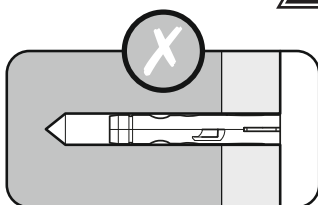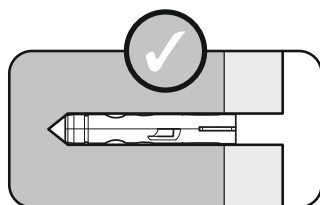  


Lubricate screw thread with soap

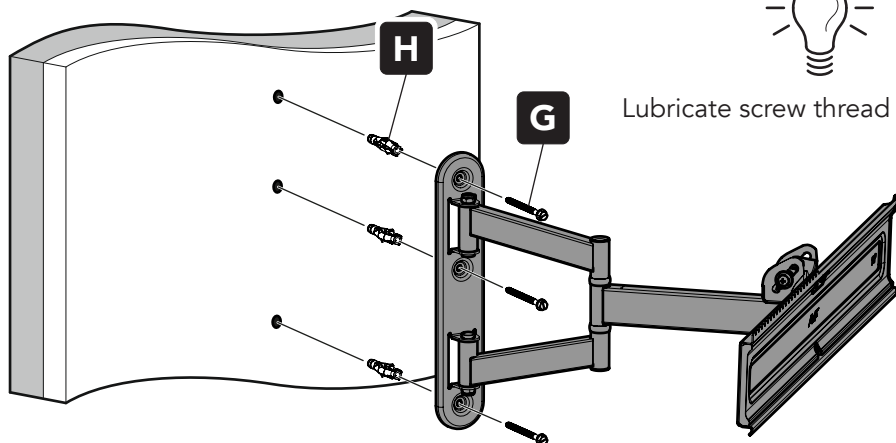 


DO NOT overtighten screws.
Tighten screws by hand only.

3b

 Wood Stud Wall

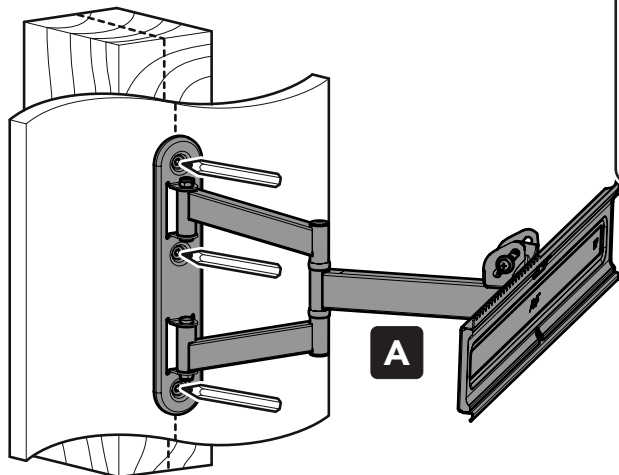


 Ensure drill holes are in the centre of the wood studs.

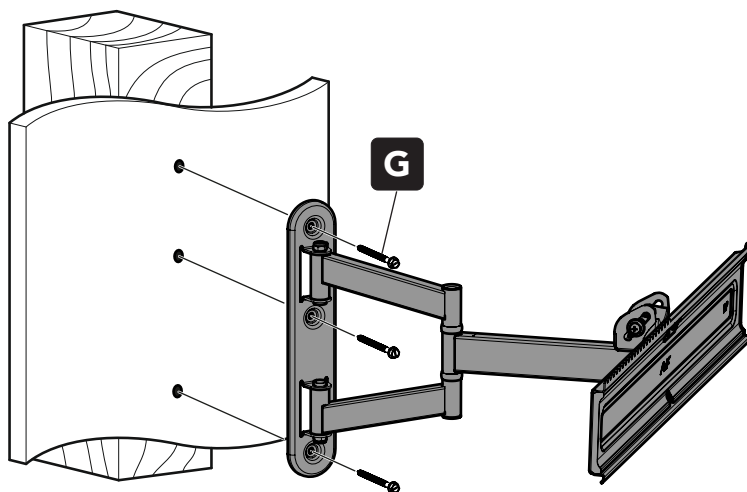



DO NOT overtighten screws.
Tighten screws by hand only.

 4 Fitting the Wall Bracket Covers

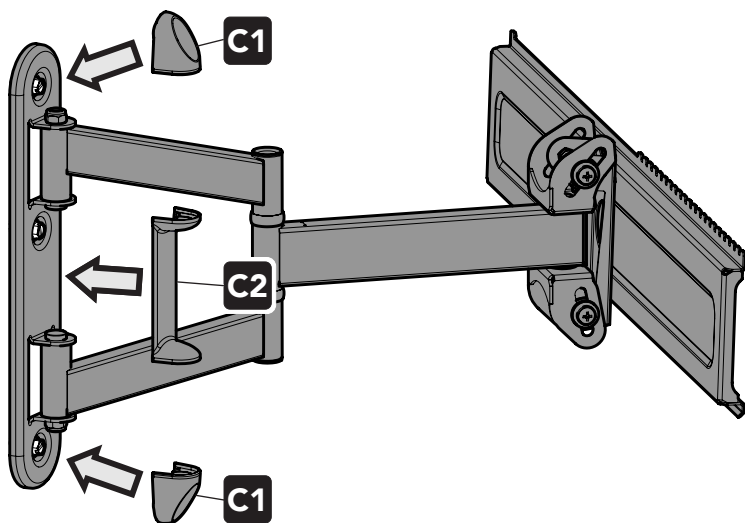

5 Hanging the TV

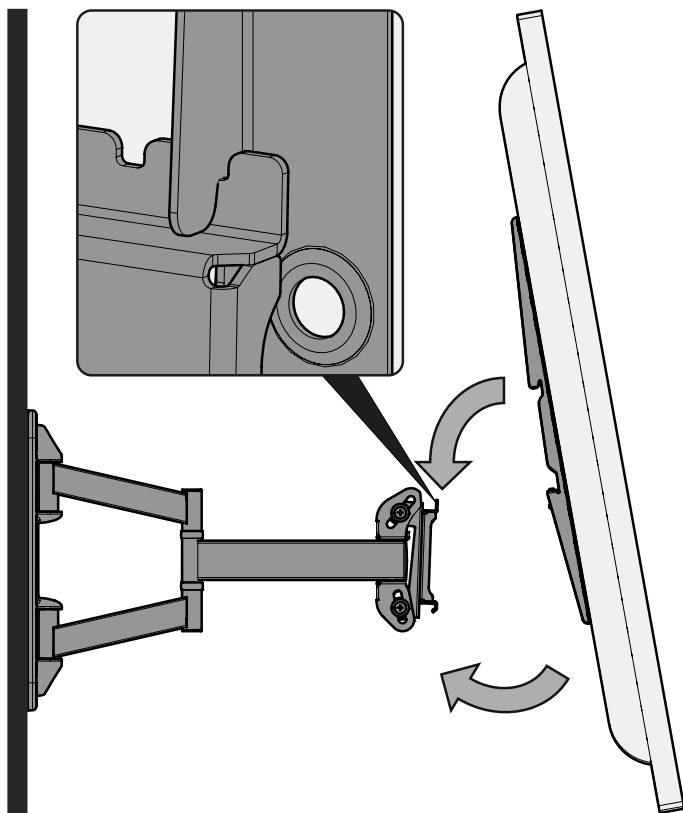 


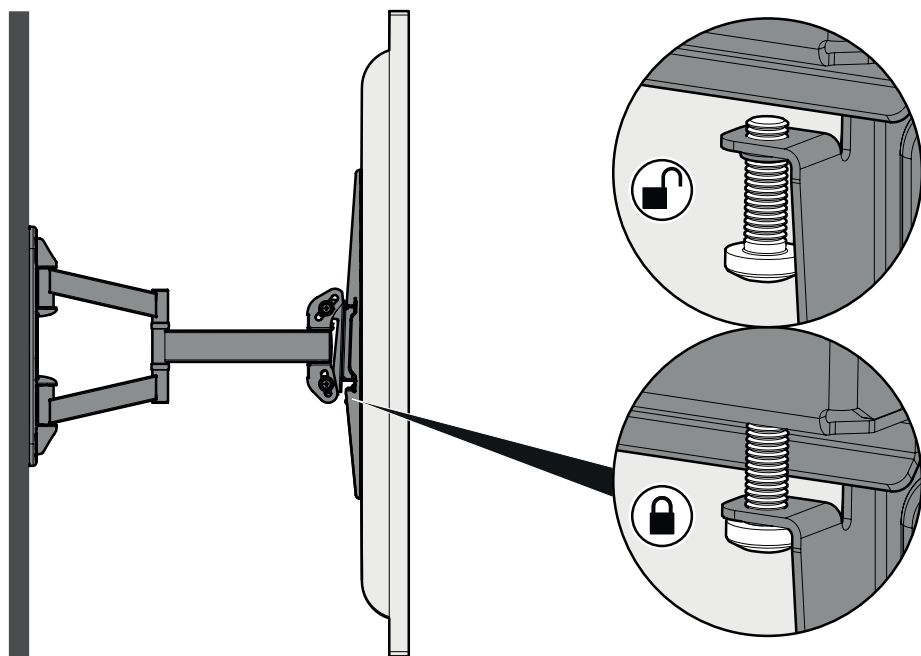 

6



Tilt Adjustment

 Adjust screws to achieve perfect tilt resistance if required.

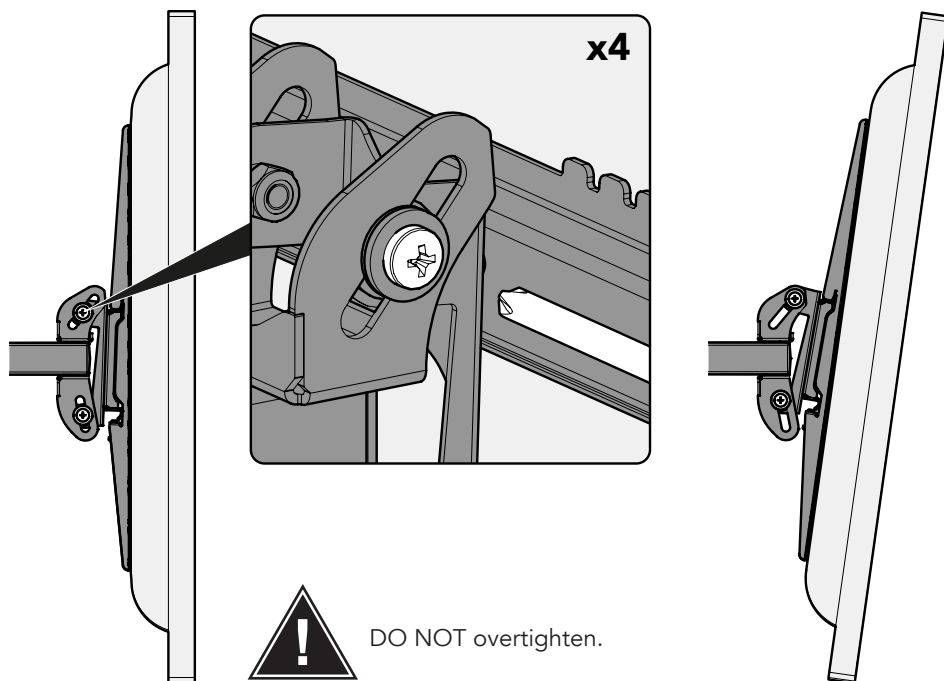

7 TV Levelling

  Remove the TV, loosen the three nuts and adjust the backplate as required. Re-tighten the three nuts and re-hang your TV.

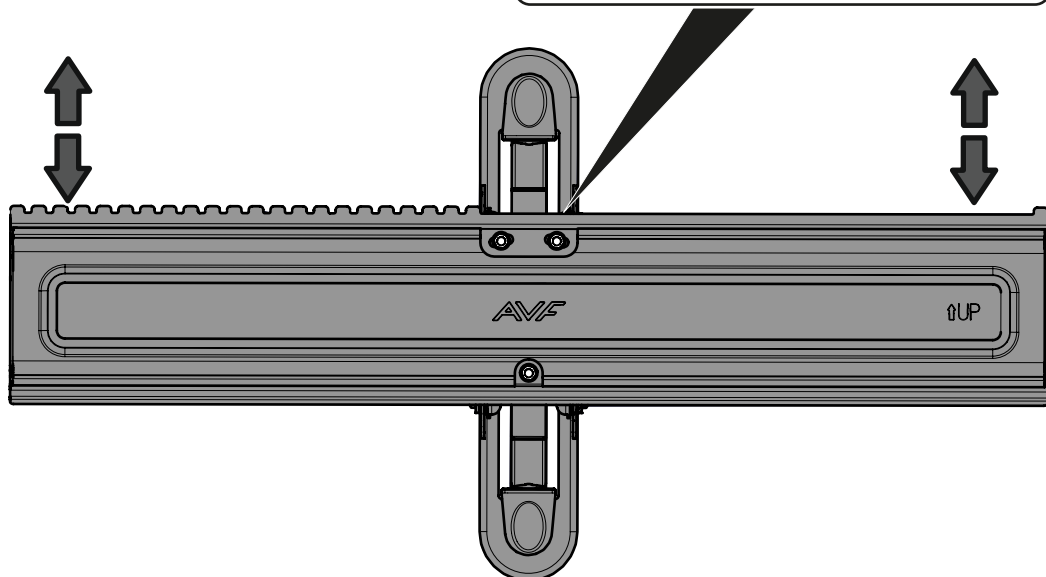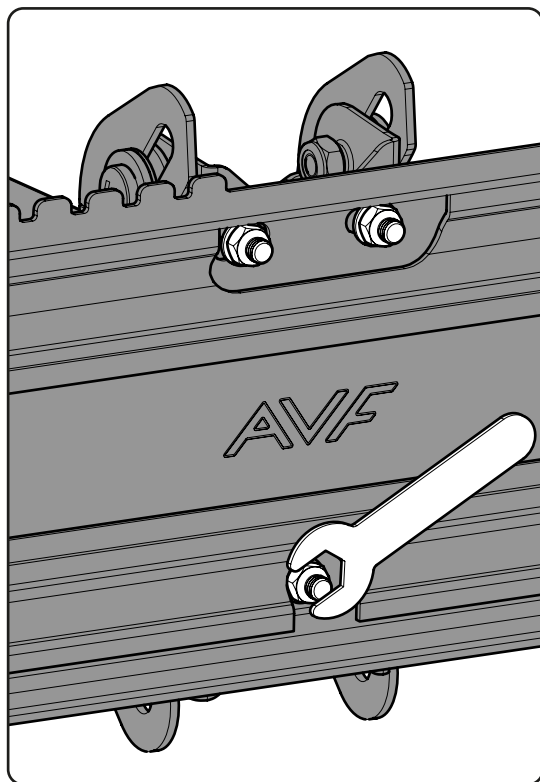

8

Arm Tension Adjustment

 
If the arms of your TV Bracket are too loose or too stiff you can adjust the arm tension by tightening or loosening the two nuts shown. Ensure you adjust both nuts equally.

i

Remove the TV.



ii

Remove the Wall Bracket Covers.

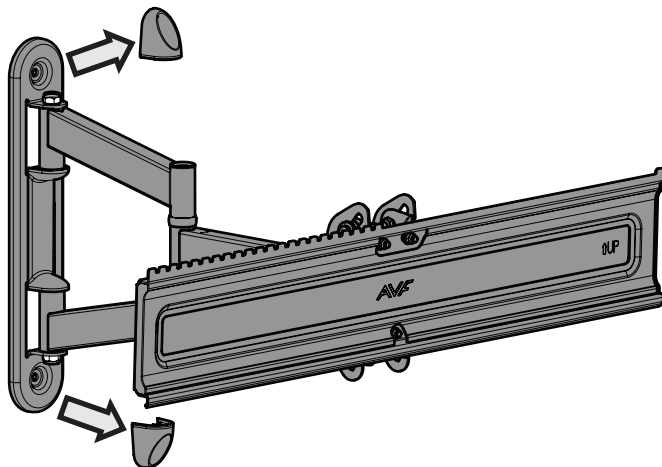

iii

  Adjust nuts to obtain required arm tension.

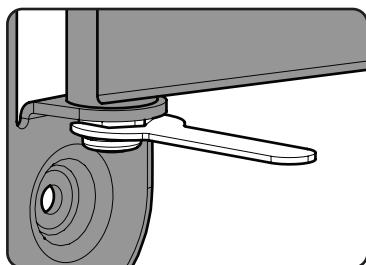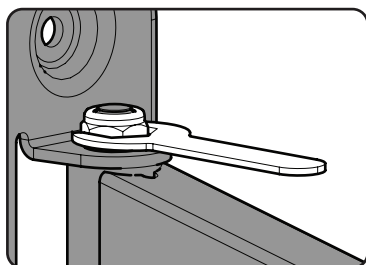

iv

Refit Wall Bracket Covers and Rehang the TV.

